



Important message to
parents, page eight
Daisy Rifle Book.

MODELS

105B, 95B, 111B, 1938B

Manual Applies to All Letter Designations

Spring/Air B•B Gun

OPERATION MANUAL

These Guns Shoot: BB Cal. (4.5mm) Steel Airgun Shot 

⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY, PARTICULARLY TO THE EYE. MAY BE DANGEROUS UP TO 212 YARDS (194 METERS).

READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING USE AND OWNERSHIP OF AIR GUNS. AIR GUNS ARE RECOMMENDED FOR USE BY THOSE TEN YEARS OF AGE AND OLDER UNDER ADULT SUPERVISION.

WARNING: THIS GUN CAN CAUSE THE LOSS OF AN EYE. READ AND FOLLOW THE INSTRUCTIONS. DO NOT COCK THE GUN UNTIL YOU ARE READY TO SHOOT. IF YOU DO COCK IT AND DECIDE NOT TO SHOOT, POINT IT IN A SAFE DIRECTION AND FIRE IT. AN UNCOCKED, UNLOADED GUN IS THE SAFEST. ACCIDENTS HAPPEN FAST, AND THE LOSS OF AN EYE IS A TERRIBLE THING. SHOOT SAFELY.

CAUTION: This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

The Code of the Daisy Rifleman[®] found in the Daisy Rifle Book section of this manual (begins on Page 9) is an important guide to the care and safe handling of any gun. **READ THIS SECTION.** It is your responsibility as the owner of this gun to make certain that anyone using the gun is instructed in its safe and proper operation.

As the proud owner of a Daisy air gun, you have become part of an American tradition which dates back to the time when your great-grandfather was a small boy. Your new Daisy gun is the result of more than 100 years experience by Daisy in the manufacture of quality products.


Although your new Daisy is not a firearm, it is a gun and should be treated with care and respect. Always remember, the first and most important safety aspect of any gun is the shooter. All safeties are mechanical devices and the shooter is the only part of the system that can make a gun safe—or unsafe. **DON'T DEPEND ON MECHANICAL SAFETIES**—think ahead and avoid situations that might lead to accidents.




FOR YOUR SAFETY AND THE SAFETY OF OTHERS, READ COMPLETE OPERATING INSTRUCTIONS BEFORE ATTEMPTING TO SHOOT GUN. Guns differ in their operations and you are never ready to fire any gun until you are thoroughly familiar with it. Read the operating instructions and **WITHOUT LOADING ANY AMMUNITION**, proceed several times through the operating steps with your gun (dry fire the gun at a safe target) so that you will be able to operate your Daisy properly and safely.

HOW TO OPERATE

CAUTION: Be sure gun is always pointed in a safe direction.

- Step 1. PUT "ON SAFE"
- Step 2. COCK
- Step 3. FEED BB
- Step 4. AIM AT SAFE TARGET
- Step 5. TAKE "OFF SAFE"
- Step 6. FIRE

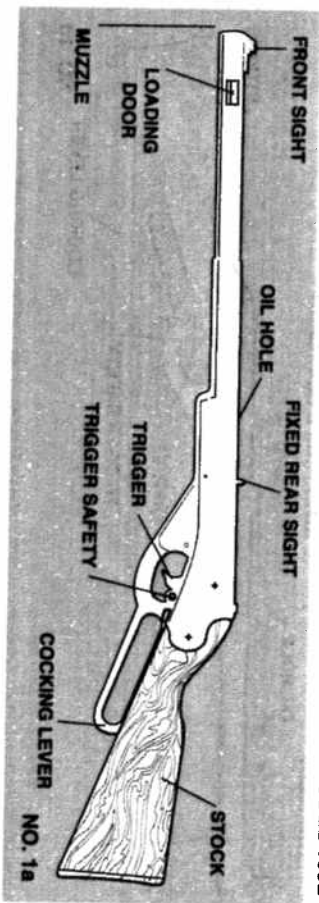

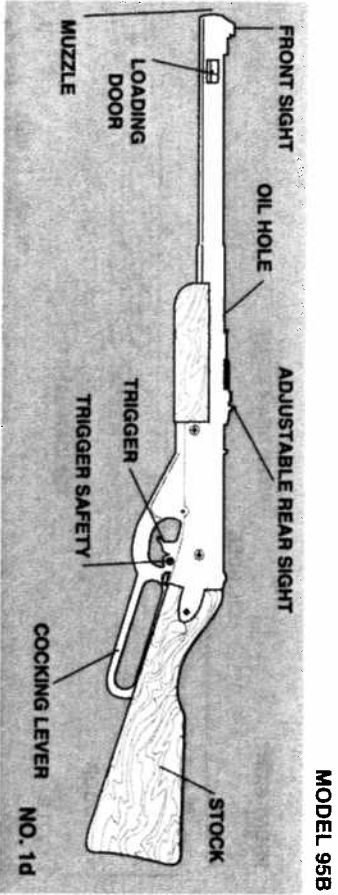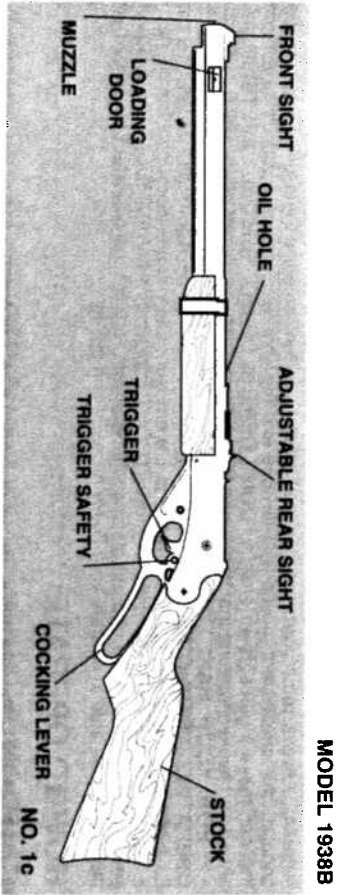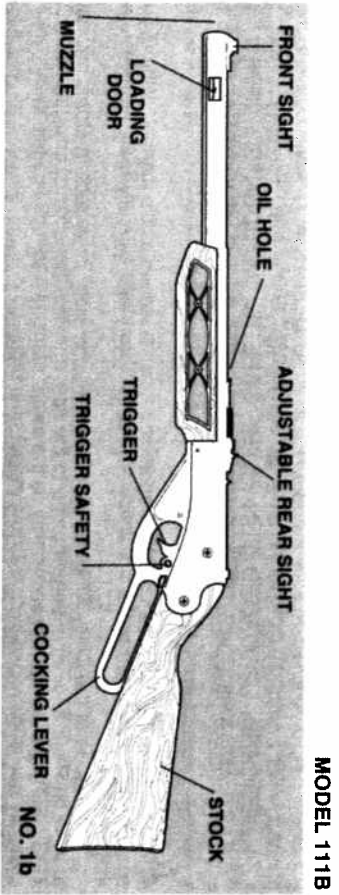


Step 1. PUT "ON" TRIGGER SAFETY

Push trigger safety from left to right so no red is showing. It is a good practice to get in the habit of keeping the trigger safety "ON" until ready to fire the gun (See Drawing No. 1a-1d).

LOAD BBS


Tilt gun to its right side, place thumb on arrow, push loading door in and up (Drawing 2a). Cup hand under barrel and slowly pour in new Daisy BBS (Drawing 2b). Do not completely fill reservoir as this could jam your gun. Close loading door.

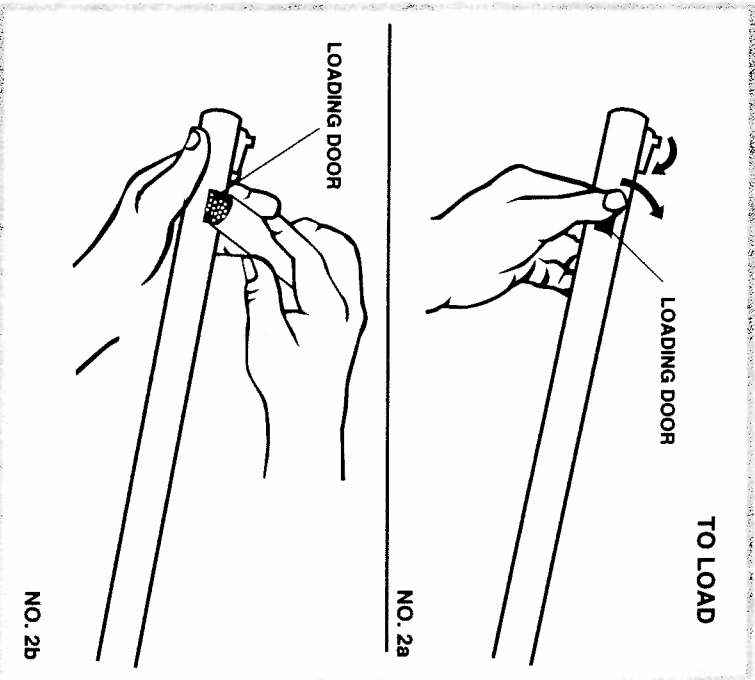

Step 2. COCK

When cocking, raise muzzle with sight up. Firmly grasp the cocking lever and pull outward until a click is heard (see drawing 3). At this point, a B&B could be loaded into the ready to fire position and your gun must be handled with care. Close cocking lever and your gun is ready to fire.

CAUTION: Gun must always be pointed in a safe direction. Keep a firm grip on the lever while cocking. The lever could slip and slam shut, possibly causing injury. (See "Pinch Points" Drawing No. 3).

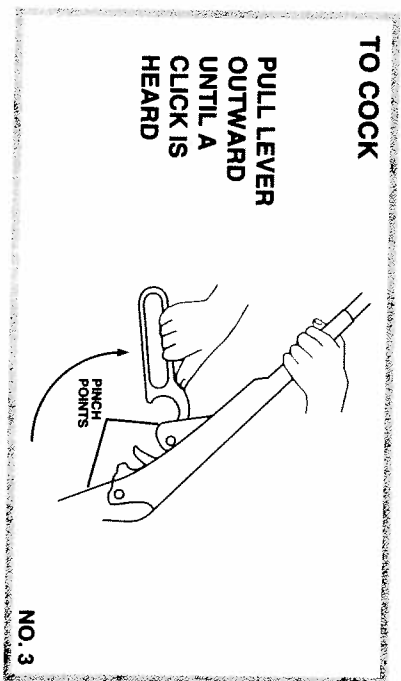


TO COCK
PULL LEVER
OUTWARD
UNTIL A
CLICK IS
HEARD

Step 3. FEED BB

Your Daisy has a gravity feed system. To ensure proper operation, you should always raise the muzzle up while cocking to ensure that a BB rolls into firing position. When raising the muzzle, be sure the front sight is pointed upward since the gun will not feed properly if it is on its side. (See Drawing No. 4).

WARNING: Failure to hold the gun correctly when feeding the BB may cause the gun to jam when it is fired. This is a dangerous condition. See Step 6 for instructions on clearing a jam.

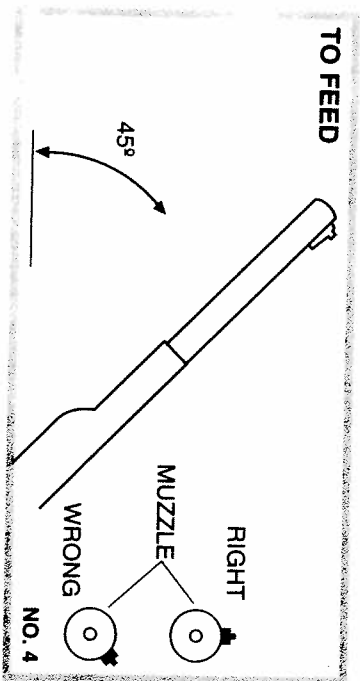

WHAT IS A JAM, AND WHY DOES IT HAPPEN?

A jammed gun is one that does not fire a BB when it is loaded, cocked and the trigger is pulled. It is a dangerous condition which must have immediate and careful attention. (See Step 6 for instructions on clearing the jam.) Jamming can result from:

4


1. Improper feeding—turning the gun on its side as the muzzle is raised to feed a BB into firing position.
2. Reusing shot which has been damaged by hitting a hard surface.
3. Using ammunition not intended for BB gun use.
4. Using dirty shot.

If you follow the instructions for proper loading and feeding, and if you only use recommended shot, your Daisy will provide many hours of trouble free, recreational air gun shooting.

Step 4. AIM AT SAFE TARGET

Your sights may be fixed or adjustable, depending on which Daisy lever action gun you have. See below for the proper adjustment of your model.
105B—This model has fixed sights.

PROPER SIGHT PICTURE FOR MODELS 105B, 11B, 1938B AND 95B.

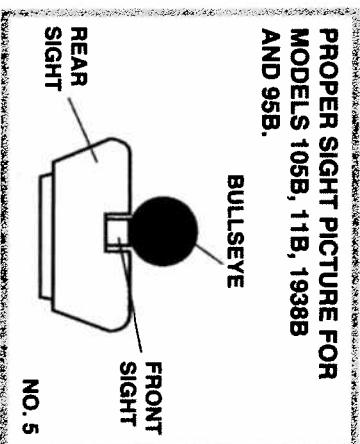

111B, 1938B, 95B - These models have an adjustable rear sight. Raise the rear sight to make the gun shoot higher; lower the rear sight to make the gun shoot lower.
See Drawing 5 for the proper sight picture for these four models.
To be a consistent marksman, use the correct sight picture each time you fire your gun.

CAUTION: Sight or point the gun only in a safe direction. BBs will bounce or ricochet if they hit a hard surface. Do not shoot at water.

Step 5. TAKE "OFF" TRIGGER SAFETY

When you are certain that the target, backstop and surrounding area are safe, push the trigger safety from right to left until red band is exposed.

CAUTION: Keep gun pointed in a safe direction.
Step 6. FIRE

After completing the operation steps, your gun may be fired by gently, but firmly, squeezing the trigger.

NOTE: A good rifleman squeezes his trigger when on target; he does not jerk or pull the trigger.

CAUTION: Never carry a cocked gun. Cock it only when ready to fire. Even with the manual safety "ON" SAFE, your gun is in a fully loaded condition and must be handled with care.

CAUTION: If the gun does not fire after loading, cocking, feeding and squeezing the trigger, the gun is jammed. This is a dangerous condition which must have immediate and careful attention. To correct it, keep the gun pointed in a safe direction, cocking and firing the gun three or four times. If you are unable to clear the gun, return it to the Daisy Service Department. (See Repair or Daisy Guns section.)

5

UNLOADING

Make certain your gun is not cocked by firing in a safe direction. Put "On Safe," then open loading door and pour BBs out. After BBs have been removed, cock and fire several times in a safe direction to be sure no BBs remain in gun.

PROPER CARE

To operate properly, your Daisy BB gun requires maintenance. Simple oiling and cleaning are sufficient. Lack of maintenance can cause poor performance and could make the gun unsafe.

OILING: To maintain top shooting performance, you should add two drops of oil in the "oil" hole (See Drawing No. 1) every 500 to 1000 shots. Also oil trigger, cocking mechanism and other moving parts regularly. Use a "20" weight motor oil. Do not use light weight household-type oils.

CLEANING: The exterior can be cleaned by wiping with a soft clean cloth. The screws and sights are a gun blue finish and should be wiped with an oiled cloth to prevent rust.

STORAGE

Unload BBs and store them in a separate place to keep them from untrained shooters. Before putting gun away in a cabinet or gun rack, make sure it is clean, dry, oiled, unloaded, and uncocked.

MODIFICATION--

CAUTION: The components of this gun were engineered to deliver optimum performance. Any modification or tampering with a gun may cause a malfunction and may make it unsafe to use. Any change in performance, such as a lowered trigger force and shortened trigger travel, indicates possible wear, and such gun should be inspected, replaced, or properly repaired by qualified personnel. Any gun that has been dropped should be checked by qualified personnel to insure that its function has not been affected.

REPAIR OF DAISY GUNS

WARNING: A GUN THAT IS NOT OPERATING PROPERLY MAY BE DANGEROUS. IT SHOULD BE KEPT SAFELY FROM USE BY ANYONE UNTIL REPAIRED OR DESTROYED. DO NOT TRY TO TAKE THE GUN APART. IT IS DIFFICULT TO REASSEMBLE, AND IMPROPER REASSEMBLY CAN CAUSE A HAZARDOUS CONDITION.

GUNS IN WARRANTY

LIMITED ONE YEAR WARRANTY

For one year from date of purchase, Daisy will repair or replace and return this gun, free of charge, if defective in material or workmanship. Service is available by returning the gun to Daisy Manufacturing Co., Inc. Attach your name, address, telephone number, description of problem and proof of date of retail purchase (sales slip) to the gun. Package and send, transportation prepaid, to Daisy Manufacturing Co., Inc. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GUNS OUT OF WARRANTY

If your Daisy needs repair, attach your name, address and brief description of problem. Package and send, transportation prepaid, to Daisy Manufacturing Co., Inc. Service Department. Daisy will repair the gun or replace it with a reconditioned gun of the same model, if available; otherwise, with a model of equivalent quality. A charge will be made for repairing or replacing your gun.

For Models 105B and 111B—The repair charge is \$8.00
For Models 1938B and 95B—The repair charge is \$14.00

Any gun should be accompanied by check or money order (not cash) in payment of the charge. If payment is not included, you will be invoiced for the charges plus \$4.00 handling charge. Upon receipt of payment, the gun will be shipped to you.

Exploded gun part drawings and price lists are available from Daisy Service Department. Please make sure you state the model number that is shown on the gun. Service and parts charges are subject to change without notification.

Daisy Manufacturing Co., Inc., Service Department
2111 South 8th, Rogers, AR 72756

NOTE: Daisy spring-air powered BB guns and pistols do not come under the provisions of the "Gun Control Act of 1968" and can be mailed.

SPECIFICATIONS

| | 105B | 111B & 1938B | 95B |
|----------------------------------|--------------------------|--------------------------|--------------------------|
| ACTION | Spring Air | Spring Air | Spring Air |
| CALIBER | .177 cal. B+B (4.5mm) | .177 cal. B+B (4.5mm) | .177 cal. B+B (4.5mm) |
| B+B CAPACITY | 400 | 650 | 700 |
| TARGET DISTANCE | 16.4 Ft. (5m) | 16.4 Ft. (5m) | 16.4 Ft. (5m) |
| MAXIMUM SHOOTING DISTANCE | 193 yds. (177m) | 195 yds. (179m) | 212 yds. (194m) |
| MUZZLE VELOCITY | 275 fps (84 mps) | 280 fps (85 mps) | 325 fps (99 mps) |
| MUZZLE ENERGY | 0.9 ft. lb. (1.2J) | 0.9 ft. lb. (1.3J) | 1.3 ft. lb. (1.7J) |