


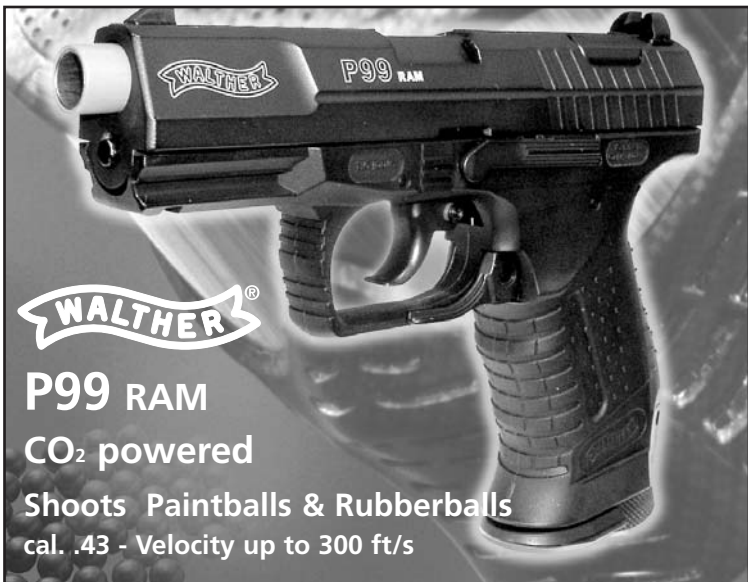

WALTHER®

P99 RAM

CO₂ powered

Shoots Paintballs & Rubberballs

cal. .43 - Velocity up to 300 ft/s

⚠ WARNING: This airgun marker is not a toy. Misuse may cause serious injury or death. Eye and ear protection designed specifically for paintball must be worn by the user and persons within range. Recommend 18 years or older to purchase. Persons under 18 must have adult supervision. READ OWNER'S MANUAL BEFORE USING.

⚠ AVERTISSEMENT : ATTENTION : Ce pistolet n'est pas un jouet. Une mauvaise utilisation peut entraîner des blessures graves voire mortelles. L'utilisateur et les personnes se trouvant à proximité doivent porter des lunettes de protection conçues spécialement pour le paintball. Achat réservé de préférence aux personnes de 18 ans et plus. L'utilisation par des mineurs doit se faire sous la surveillance d'un adulte. LIRE LE MANUEL AVANT TOUTE UTILISATION.

⚠ ADVERTENCIA: Esta pistola no es un juguete. Su uso indebido puede causar lesiones graves o incluso la muerte. Las personas que se encuentran en las inmediaciones y el tirador deberán llevar protectores especiales de ojos contra bolas de pintura. Venta recomendada a mayores de 18 años. Personas más jóvenes deben ir siempre acompañadas y ser supervisadas por un adulto. LEA LAS INSTRUCCIONES DE USO ANTES DE SU UTILIZACIÓN.

NOTE REMARQUE • NOTA

⚠ WARNING: You must be 18 years or older to purchase this CO₂ gun. Carefully read and understand these instructions before using this weapon. Buyers and users must follow the instructions for the safe use. This Gun can cause serious injury or death. Accidents happen fast. Fatally wounding someone is a terrible thing. Please shoot safely.

(EN)

Technical Data:

System:	self-loading CO ₂ -pistol	Length:	7,08 inch
Velocity:	300 ft/s	Weight:	1,95 lbs
Caliber:	cal. .43, paintballs and rubberballs	Magazine capacity:	9 shots
		Safety:	Decocking key/ Trigger safety

⚠ AVERTISSEMENT : Il est possible d'acquérir cette arme à partir de l'âge de 18 ans. Pour votre sécurité et celle d'autrui, veuillez lire intégralement le mode d'emploi avant de procéder au premier tir. Les propriétaires et les utilisateurs de cette arme sont tenus de respecter toutes les règles relatives à l'utilisation et à la possession des pistolets à air comprimé. Cette arme peut causer de sérieuses blessures voire entraîner la mort. Les accidents sont vite arrivés. Blesser mortellement quelqu'un est très grave. Respectez toujours les règles de sécurité lors que vous tirez.

(F)

Fiche technique:

Système :	Pistolet au CO ₂ à chargement automatique	Longueur :	7,08 inch
Vélocité:	300 ft/s	Poids :	1,95 lbs
Calibre :	cal. .43, billes de peinture et projectiles en caoutchouc	Capacité du chargeur :	9 billes
		Sûreté :	Poussoir de désarmement/ sûreté de détente

⚠ ADVERTENCIA: Esta arma se puede adquirir a partir de los 18 años. Antes de utilizarla por primera vez lea atentamente las instrucciones de empleo para su propia seguridad y para la seguridad de otros. Tanto propietarios como tiradores están obligados a observar todas las reglas respecto al uso y a la posesión de pistolas de aire. Este arma puede causar heridas graves o la muerte. Los accidentes se dan con rapidez. Herir de gravedad a alguien es algo muy serio. Rogamos que siempre dispare con absoluta seguridad.

(E)

Especificaciones:

Sistema:	Pistola de CO ₂ de carga automática	Longitud:	7,08 inch
Velocidad:	300 ft/s	Peso:	1,95 lbs
Calibre:	bolas de pintura y proyectiles de goma de cal. .43	Capacidad del cargador:	9 disparos
		Seguro:	Pulsador de desarme/ seguro de gatillo

DESCRIPTION
DÉSIGNATION • DESIGNACIÓN



DESCRIPTION

DÉSIGNATION • DESIGNACIÓN

GB

- 1 Muzzle
- 2 Foresight
- 3 Slide
- 4 Slide catch
- 5 Decocking key
- 6 Rear sight
- 7 CO₂ gas cylinder holder
- 8 Magazine
- 9 Grip

- 10 Magazine holder
- 11 Trigger
- 12 Loading port
- 13 Follower
- 14 CO₂ gas cylinder (not delivered with the gun)
- 15 Paintballs and rubber projectiles
- 16 Cleaning cloth
- 17 Barrel cleaner
- 18 Trigger safety

F

- 1 Bouche
- 2 Guidon
- 3 Glissière
- 4 Levier de retenue de la glissière
- 5 Poussoir de désarmement
- 6 Hausse
- 7 Logement de la capsule de CO₂
- 8 Chargeur
- 9 Poignée du pistolet
- 10 Arrêtoir du chargeur

- 11 Détente
- 12 Ouverture du chargeur
- 13 Retenue du ressort
- 14 Bonbonne de CO₂ (non fournies avec le modèle standard)
- 15 Billes de peinture et projectiles en caoutchouc
- 16 Chiffon de nettoyage
- 17 Baguette de nettoyage du canon
- 18 Sûreté de détente

E

- 1 Boca
- 2 Punto de mira
- 3 Corredera
- 4 Palanca de retenida de la corredera
- 5 Pulsador de desarme
- 6 Mira
- 7 Contenedor de la cápsula de CO₂
- 8 Cargador
- 9 Empuñadura

- 10 Retén del cargador
- 11 Gatillo
- 12 Abertura de carga
- 13 Retén del resorte
- 14 Bombona de CO₂ (no se incluyen con el modelo estándar)
- 15 Bolas de pintura y proyectiles de goma
- 16 Paño de limpieza
- 17 Baqueta de limpieza del cañón
- 18 Seguro de gatillo

⚠ WARNING: This symbol marks safety instructions and cautions in this operation instruction. Carefully follow them for your own safety and the safety of others.



⚠ WARNING: Unauthorised modifications of this CO₂-pistol may result in a different legal classification and are therefore not permitted. The manufacturer's warranty will become null and void in such cases.

1. Safety

You can secure the pistol from unintentional firing even when the slide has been cocked for single action shooting (refer to page 13 – safe aiming and firing)

To do so, press down the decocking lever **①**.
The loading condition of the weapon can be seen at the rear.

If the red marking is within the slide,
- then the hammer is decocked **②**
- if it is outside, the hammer is cocked. **③**

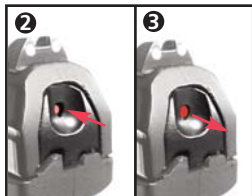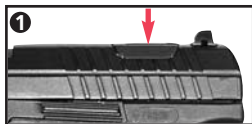

Trigger safety:

To Put the Airgun Marker "ON SAFE": Push the safety in (to the right) until no red is showing.

To Take the Airgun Marker "OFF SAFE":

Push the safety in (to the left). When you can see the RED the airgun marker is "OFF SAFE" and can be fired.



⚠ WARNING: • Only handle the pistol when it is decocked and the safety knob on SAFE.

- Always make sure that the muzzle points into a safe direction.
- The weapon can be fired with the hammer decocked by simply pulling the trigger.

Reviewing safety

- Every person with in range must wear eye, face and ear protection designed specifically to stop paintballs and meeting Specification F1776 (ASTM).
- Always measure your marker's velocity before playing paintball and never shoot at velocities in excess of 91.44m/s (300ft/s).
- Always store your weapon unloaded, degassed and with the safety on "safe". Keep it away from unauthorized persons (unskilled persons, children, persons less than 18 years old) and keep it separate from the ammunition.
- Never point the airgun marker at any person or at anything you do not intend to shoot.
- Always treat the airgun as though it is loaded and with the same respect you would a firearm.
- Always aim in a SAFE DIRECTION . Always keep the muzzle of the airgun marker pointed in a SAFE DIRECTION .
- Always keep the airgun marker "ON SAFE" until you are ready to shoot.
- Always check to see if the airgun marker is "ON SAFE" and unloaded when getting it from another person or from storage.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- Use the proper size projectile for your airgun marker.
- Never reuse ammunition.
- Do not shoot at hard surfaces or at the surface of water. The projectile may bounce off or ricochet and hit someone or something you had not intended to hit.
- Place the backstop in a location that will be safe should the backstop fail.
- Your backstop should be checked for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Do not attempt to disassemble or tamper with your airgun marker. Unauthorized repairs or modifying the function of your airgun in any way may be unsafe and will void your warranty.

2. Insertion, removal and exchange of a CO₂ gas cylinder

⚠ WARNING: Cock the slide before inserting the cylinder.
The striker must be cocked.

Note: Use only 12g CO₂-cartridges.

Do not use cartridges with other gases.

- Unscrew the gas cylinder holder. ④
- Insert a full CO₂ gas cylinder in the holder. ⑤
- Insert the gas cylinder holder with a full cylinder into the grip. ⑥
- Tighten the holder. The CO₂ gas cylinder has now been stabbed and sealed.
- Make sure that the cylinder has been stabbed. Fire the unloaded pistol into a safe direction. If it does not fire, tighten the knurled screw even more.



⚠ WARNING: Never use force when inserting a gas cylinder. We recommend to remove the gas cylinder prior to any long-time storage. This will also relieve the valve.

2. Removal of the CO₂ gas cylinder

Decock the weapon. Use one hand to hold the weapon at the top of the receiver. Use the other hand to remove the gas cylinder holder. ④

Remove the grip strap, turn the cylinder adjustment screw fully down. Residual gas may now be discharged. The cylinder can now be removed.

⚠ WARNING: Residual gas will remain in the gun after removal of the CO₂ cartridge, making it possible to fire a few more shots.

⚠ WARNING:

- Keep hands and face at a safe distance from the CO₂ gas cylinder.
- Escaping CO₂ gas may cause icing.
- CO₂ gas cylinders may explode if exposed to temperatures exceeding 50°C.
- Never attempt to reuse a CO₂ gas cylinder for any purpose.



3. Loading of the CO₂-pistol

Remark: Only use flawless paintballs and rubber projectiles, cal..45. Under no circumstances use the following ammunition:

- deformed, used, soiled

Warranty expires by use of not recommend ammunition.

- Put the marker "ON SAFE".
- Press the magazine holder from the top.
- Remove the magazine at the bottom of the weapon **8**.
- Pull the follower down. Lock it at the side **9**.
- Load a maximum of 9 projectiles through the loading port **10**.
- Unlock the follower. Insert the magazine into the weapon until it locks.




4. Safe aiming and firing

- Cock the slide by retracting it.
- Retract the slide to its rearmost position, this will cock the hammer **11**.
- After all projectiles have been fired, the slide will stop in its rearmost position. Repeat loading (see above). After the magazine has been loaded, press the slide catch down **12**.
- You may fire in single action or double action mode:
Single action (with the hammer already cocked): for accurate shots.
Double action (without the hammer cocked): for rapid shooting.

- ⚠ WARNING:**
- Load the magazine with paintballs only **11** when the slide is open.
 - Never hold your hand in front of the muzzle.
 - Point the muzzle in a safe direction.
 - Should a paintball burst inside the weapon then all residues have to be removed before the gun is fired again. (see page 15).

4. Safe aiming and shooting

- When you are sure of your target and backstop, and the area around the target is clear, you can shoot.
- Squeeze the trigger with steady pressure until the pistol fires. Through the Blow-Back-System the slide will repeat and the pistol will be ready to fire again. 13

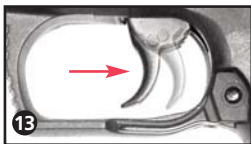

NOTE: *Don't touch the slide while shooting, as the reloading movement could cause injury.*




⚠ WARNING:

- Because of the high energy of the gun only select targets which cannot be penetrated or which will not cause ricochets.
- Never aim at people or pets.
- Always wear protective shooting glasses when using the gun.
- Never fire at water surfaces.




5. Adjusting the sights

- Aim at a safe target:
- Line-up the front sight in the middle of the rear sight.
- Hold the gun in such a way that the center of the target rests on the front sight. The top edge of the rear sight, the top of the front sight and the center of the target must be in a line (point-blank shot). 14

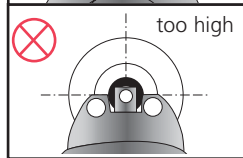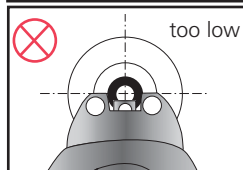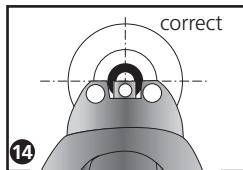

Sight adjustment:

- The rear sight is laterally adjustable. 15

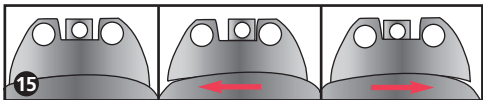

6. Care/maintenance and storage

⚠ WARNING: Never leave a loaded weapon unattended!

You should only keep and store the gun in its unloaded condition. Make sure that no BBs are left in the barrel, remove the CO₂ gas cylinder and remove ammunition from the magazine.


⚠ WARNING: Only clean the weapon in its unloaded and decocked condition.

NOTE: Keep the gun away from children and unauthorized people.

Clean the surface of your pistol with a soft cloth and gun oil. To ensure continued proper function, place 2-3 drops of gun oil on the cartridge lock, slide rails, and grip lock button after every 500 shots.

Barrel cleaning

- Put the safety "ON SAFE" in insert an empty magazine. Hold the gun into a safe direction.
- Open the breech lid by pulling the cocking lever.
- Attach the cleaning cloth to the end of the barrel cleaner.
- Push it through the opening of the breech lid towards the muzzle. **16**
- Pull the barrel cleaner with the cloth attached through the barrel. **17**
- Repeat this action until the barrel is clean and free of oil. You can now fire paintballs from your gun.

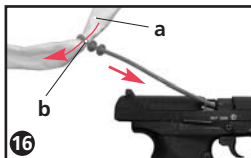

8. Trouble shooting	CO ₂ gas cylinder is empty	barrel is dirty	incorrect pellets
Bad shooting efficiency	●	●	●
Weapon does not function	●		●
Low pellet velocity	●	●	●

9. Repair

⚠ WARNING: Repairs should only be completed by UMAREX authorised centres.



9. Warranty

This product is warranted to the retail consumer for one (1) year from date of retail purchase against defects in material and workmanship; and is not transferable.

WHAT IS COVERED: Replacement parts and labor.

WHAT IS NOT COVERED: Transportation charges to UMAREX USA for defective product. Damages caused by abuse or failure to perform normal maintenance. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY CLAIMS: Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number, and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$14.95 to cover shipping and handling.

IMPLIED WARRANTIES: ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

UMAREXUSA[®]

UmarexUSA Inc.
6007 South 29th Street
Fort Smith, AR 72908 USA
Phone: (479) 646 - 4210
Fax: (479) 646 - 4206
www.UmarexUSA.com