TX200 Mk3



TX200HC

USERS HANDBOOK

THIS HANDBOOK REFERS TO TX200 Mk3 & TX200HC MODELS

PLEASE READ THIS MANUAL BEFORE USING YOUR NEW RIFLE, IT CONTAINS IMPORTANT SAFETY INFORMATION AND INSTRUCTION ON ADJUSTMENT AND MAINTENANCE.



***** SAFETY CODE *****

- 1 TREAT THIS AIR RIFLE AS IF LOADED.
- 2 NEVER POINT IT AT ANYONE, EVEN IF UNLOADED.
- 3 NEVER LEAVE THIS RIFLE UNATTENDED WHEN COCKED OR LOADED.
- 4 ALWAYS BE SURE OF WHAT LIES BEYOND YOUR TARGET.
- 5 ALWAYS CONDUCT YOURSELF IN A SPORTSMAN-LIKE MANNER.

ALWAYS BE AWARE THAT YOUR ACTIONS WILL BE UNDER THE SCRUTINY OF OTHER MEMBERS OF THE PUBLIC WHO MAY NOT SHARE YOUR ENTHUSIASM FOR AIR WEAPONS. BAD PRACTICES PROMOTE BAD PUBLICITY. DO NOT JEOPARDISE YOUR FUTURE ENJOYMENT BY MISUSING THIS WEAPON.

This rifle has been set up and tested on air arms pellets (see back page). If any other make or type of pellet is used, the rifle must be re-tested to ensure the muzzle energy is within the legal limit.

WARNING! - UNAUTHORISED DISASSEMBLY OF THIS RIFLE WILL INVALIDATE THE MANUFACTURERS WARRANTY

THIS AIRGUN IS INTENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER.



WARNING!

Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.



WARNING!

Do not inhale dust from lead pellets or put lead pellets in the mouth. Wash hands after handling lead. Lead pellets contain lead, a chemical known to the State of California to cause cancer and birth defects (or other reproductive harm).



WARNING!

Keep the air rifle in the ON SAFE position until you're ready to shoot, then push the safety to the OFF SAFE position.



WARNING!

Keep your finger off the trigger while cocking the air rifle or with the barrel in the downward position. Failure to do so may permanently damage your air rifle. Do not shoot without a pellet in the chamber (dry fire). This may permanently damage your air rifle.



WARNING!

Use the correct pellet size according to your Air Arms rifle model. Never reuse pellets. The use of any other kind of ammunition can cause injury to you or damage to the air rifle.



WARNING!

Do not assume that the gun is unloaded if it fails to fire properly!



WARNING!

Never leave your gun loaded. Do not store it loaded.

IMPORTANT INFORMATION, PLEASE READ

Before leaving the factory this rifle was Q.A. Inspected and test fired using air arms pellets to check operation and final adjustment.

It was dispatched in a sealed purpose designed box with a contents label on the lid. Air arms may not be responsible for any damage to the contents or missing items if the box is not original, if it is damaged or the seals are not intact.

Air arms cannot be held responsible for damage or missing items due to transit damage, mishandling or being tampered with after leaving the factory.

If this rifle is not received in the original box with the seals intact, please examine carefully for any damage, missing tools or documentation.

In the first instance any problems or complaints regarding this product should be referred to the supplier.

To maintain this rifle in good working order it should be serviced annually by a competent gunsmith, your supplier may be able to provide this service or contact air arms.

A reasonable amount of advice will be provided to enable the end user to service their own rifle, however this is at the discretion of air arms and may not be given in all cases.

The velocity of this rifle has been set using air arms hunter pellets. If any other make or type of pellet is to be used, the rifle must be re-tested with the pellet that is to be used to ensure the muzzle energy is within the limits determined by current legislation.

Contact your supplier or air arms for any advice on this matter.

CHECKING VELOCITY

- 1 Use a reliable chronograph to check velocity, (the formula below requires the reading to be in feet per second FPS)
- Use fine measurement scales to weigh the pellet, If scales are unavailable the pellet weight may be stated on the pellet container lid or contact the supplier. (The formula requires the weight to be in grains). To convert from grams to grains multiply by 15.432, i.e. 0.69 grams x 15.432 = 10.65 grains.
- 3 To find the muzzle energy in ft/lbs use the formula (FPSxFPSxGrains)/450240, i.e. (700x700x10.65) = 5218500 divide by 450240 = 11.59.

CURRENT LEGISLATION LIMITS NON-FAC HOLDERS TO AIR RIFLES WITH A MAXIMUM OF 12ft/lbs MUZZLE ENERGY.

WARNING!

It is a very serious offence to be in possession of an air rifle that you are not certificated for. Conviction can result in confiscation of your rifle, a heavy fine or imprisonment, even a combination of all three.

CAUTION:

This air rifle is not a toy and may cause death or serious injury if misused or used carelessly. Read all instructions before

Using. This air weapon requires adult supervision if the user is under 14 years old. The supervisor must be at least 21 years old. The purchaser and user have the responsibility to conform to all laws concerning the use and ownership of this air weapon.

***** LIMITED LIABILITY WARRANTY *****

THIS PRODUCT IS WARRANTED TO THE RETAIL CUSTOMER FOR 12 MONTHS FROM DATE OF PURCHASE AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP AND IS TRANSFERABLE TO ANY SUBSEQUENT OWNER.

PROOF OF PURCHASE IS REQUIRED TO RECEIVE WARRANTY REPAIRS, RETAIN YOUR PURCHASE INVOICE AND RETURN THE WARRANTY REGISTRATION CARD AS SOON AS POSSIBLE AFTER PURCHASE. THE WARRANTY CARD MUST SHOW THE DEALER/SUPPLIER NAME AND ADDRESS AND DATE OF PURCHASE.

WHAT IS COVERED

REPLACEMENT PARTS & LABOUR ON A 'BACK TO BASE' BASIS, RETURN TRANSPORTATION TO THE CONSUMER (MAINLAND UK ONLY).

WHAT IS NOT COVERED

TRANSPORTATION FROM TO CONSUMER TO AIR ARMS.

DAMAGE CAUSED BY MISUSE, ABUSE, LACK OF ROUTINE MAINTENANCE, TRANSIT DAMAGE BETWEEN THE DEALER/SUPPLIER AND THE CONSUMER OR UNAUTHORISED DISASSEMBLY. PARTS SUBJECT TO NORMAL WEAR AND TEAR.

ANY OTHER CONSEQUENTIAL COST INCURRED BY THE CONSUMER.

RETURN TRANSPORTATION TO CONSUMERS OUTSIDE MAINLAND UK.

NO WARRANTY IS IMPLIED AS TO THE FITNESS FOR ANY PARTICULAR PURPOSE.

Air arms reserve the right to alter the construction, appearance or performance of any product without prior notification. All illustrations are for information purposes only and do not necessarily show the exact model that was purchased.

Do **not** store this rifle in a damp place such as garden shed or garage.

Do <u>not</u> store this rifle in a plastic or PVC gun bag without first applying a surface corrosion inhibitor.

Never leave this rifle in a cocked condition.

Always ensure the cocking lever is fully closed before firing.

Do not test fire the rifle without a pellet in the barrel.

Felt or similar cleaning pads must not be fired from this rifle unless a pellet is inserted behind the pad. Alternatively, clean the barrel with a pull through.

Do not fire this rifle without a pellet in the barrel and only use lead pellets.

GENERAL MAINTENANCE

Regularly check the tightness of all fixings. Do not over-tighten, some parts are made from aluminium, stripped threads will result from over-tightening. Periodically clean the barrel with a good cleaner and pull through.

Do not apply lubricant to the barrel seals or allow lubricant to penetrate to the piston seal as dieseling may result. Dieseling is caused by oil or grease igniting in the compression tube when the rifle is fired. This process is very damaging and should be avoided at all costs.

A couple of drops of oil must be applied to the safety catch button regularly to ensure safe operation. Preferably just before each shooting session.

OPERATING INSTRUCTIONS

To cock the rifle, hold securely in one hand and with the other pull the cocking arm downwards and back until the trigger mechanism engages and the safety catch button pops out. The button has an <u>indication mark</u>, coloured <u>red</u>, to show when the safety is engaged, the safety button has to be push in to disengage the safety, the gun is now ready to fire. If the red button is not showing the safety is disengaged and the rifle will fire.

In addition to the safety catch that disables the trigger mechanism, this rifle has a 'safety lock' that provides a full mechanical lock to the sliding breech at the end of the



cocking stroke. This safety device gives additional security when inserting a pellet, however the user is still advised to keep hold of the cocking arm as illustrated above. Be sure that you do not obstruct the safety catch button and prevent it from working during the cocking process.

Do not hold the rifle by the pistol grip whilst cocking, you may accidentally touch the trigger and cause the rifle to fire during the loading sequence.

IN THE INTERESTS OF SAFETY ALWAYS:-

- 1: Check the safety button before inserting a pellet
- 2: Keep hold of the cocking arm whilst inserting a pellet.

The cocking action opens the breech and exposes the barrel ready to insert a pellet.

To close the cocking arm it is necessary to depress the front end of the safety lock and keep it depressed until the cocking arm is fully closed. Ensure that the ident ball is located in the ident. Serious damage will result if the rifle is fired with the cocking arm partly open.

Release the safety catch by pushing the button in fully. The rifle is now ready to fire. The safety catch cannot be re-engaged without re-cocking the rifle so do not release the safety catch before you need to.







TRIGGER ADJUSTMENT

The trigger is two stage with adjustments on both stages. Be aware that adjustment to one screw will effect the adjustment of the other and the trigger will only work properly if there is the correct balance between the two. If you have no experience in adjusting two stage triggers seek guidance or leave the trigger as set by the factory. *Incorrect adjustment can make the rifle unsafe*.

There are three adjusting screws. Screw (a) the weight of pull screw. This is under the rear of the trigger guard and the guard must be removed to make adjustments. Clockwise movement increase the weight. Screw (b) & (c) are in the trigger blade itself. Screw (b) adjusts the exact pull-off point. Clockwise decreases the pull-off point. Screw (c) adjusts the length of first stage travel, again clockwise decreases the length of first stage travel.



Remember that small adjustments will make a noticeable change to the operation of the trigger. Only make 1/4 turn adjustments at a time and test fire the rifle before making further adjustments. Jot down all adjustments on a piece of paper so that you can retrace your steps if necessary.

NOTE!: IF THE TRIGGER GUARD IS REMOVED AND THEN REPLACED, THE REAR SCREW (TX460) MUST BE TIGHTENED BEFORE THE FRONT SCREW (TX440). DO NOT OVER-TIGHTEN THE FRONT SCREW. THIS SCREW PULLS THE ACTION INTO THE STOCK AND ONLY NEEDS TO BE TIGHT ENOUGH TO STOP MOVEMENT WITHIN THE STOCK.

SAFETY

You and others with you should always wear shooting glasses to protect your eyes.

- Always aim your air rifle in a SAFE DIRECTION. When you are sure of your target and backstop and the area around the target is clear, take the air rifle OFF SAFE and squeeze the trigger to fire.
- Do not shoot at hard surfaces or at the surface of water. The pellet may bounce off or ricochet and hit someone or something you had not intended to hit.
- Always choose your target carefully. It is best to shoot at paper bullseye targets attached to a safe backstop. Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Your rifle is suited for indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target.
- Do not attempt to disassemble or tamper with your air rifle. Contact Air Venturi at 216-292-2570 for repair.

Do not put the air rifle away while it is loaded or cocked.


REPAIR SERVICE
If your rifle needs to be repaired,
contact Air Venturi at 216-292-2570.

$\it NOTE!$ PARTS WITH 'HC' IN THE DESCRIPTION ARE ONLY FITTED HUNTER CARBINE MODEL

PART LIST <> TX AND HUNTER CARBINE

PART NO.	DESCRIPTION.	QTY	PART NO.	DESCRIPTION.	QTY
TX215	MAIN CYLINDER	1	TX352	12FTLB FRONT SPRING GUIDE 22	1
TX215LH	MAIN CYLINDER LH	1	TX353	12FTLB FRONT SPRING GUIDE 177	1
TX221	BARREL SEAL	2	TX354	MAINSPRING PRELOAD WASHER	-
TX222	BARREL RETAINING NUT	1	TX355	12FTLB MAINSPRING	1
TX223A	BARREL/TUBE ASSY 177	1	TX360H	HIGH POWER REAR SPRING GUIDE	1
TX223B	BARREL/TUBE ASSY 22	1	TX363	HIGH POWER REAR GUIDE WASHER	1
TX223C	BARREL/TUBE ASSY 177 HC	1	TX362	12FTLB REAR SPRING GUIDE	1
TX223D	BARREL/TUBE ASSY 22 HC	1	TX366	CHASSIS RETAINING PIN (SMALL)	1
TX227	COCKING ARM BUFFER	1	TX367	CHASSIS RETAINING PIN (LARGE)	1
TX231P	IDENT BALL ASSY	1	TX370	SAFETY BUTTON	1
TX236	IDENT BALL ASSY SCREW	1	TX371	SAFETY BUTTON SPRING	1
TX236C	IDENT BALL ASSY SCREW HC	1	TX379	TRIGGER CHASSIS ASSY	1
TX259C	IDENT BALL ASSY HC	1	TX380	TRIGGER BLOCK ASSY	1
TX264C	COCKING ARM HC	1	TX380A	TRIGGER CHASSIS	1
TX264/3	COCKING ARM	1	TX381	TRIGGER ADJUSTING SCREW	1
TX266	COCKING ARM PIVOT PIN	1	TX382	TRIGGER ADJUSTING SPRING	1
TX281	COMPRESSION TUBE ASSY	1	TX396	TOP/MIDDLE SEAR SPRING	1
TX285	COCKING SHOE	1	TX397	SPRING RETAINING PIN	2
TX290	COCKING LINK	1	TX398	CHASSIS PIN	3
TX292	SAFETY LOCK BLOCK	1	TX405	CHASSIS BUSH	2
TX294	SAFETY LOCK RATCHET	1	TX410	TRIGGER BLOCK RETAINING BOLT	1
TX296	SAFETY LOCK SCREW	2	TX415	STOCK BRACKET	1
TX297	SAFETY LOCK PIN	1	TX416	STOCK BRACKET FIXING SCREW	1
TX298	SAFETY LOCK SPRING	1	TX420	TRIGGER GUARD	1
TX300	COCKING LINK PIVOT PIN	1	TX430	TRIGGER BLADE	1
TX305	CIRCLIP	2	TX431	TRIGGER ADJUSTING SCREW	2
TX320HH	PISTON	1	TX432	ADJUSTING SCREW LOCKING PAD	1
TX325	FRONT PISTON BEARING	1	TX435	FRONT STOCK SCREW	2
TX330	PISTON SEAL	1	TX440	REAR STOCK SCREW	1
TX340	REAR PISTON BEARING	1	TX445	R/H BEECH STOCK	1
TX350H	HIGH POWER FRONT SPRING GUIDE	1	TX450	R/H WALNUT STOCK	1
TX351H	HIGH POWER MAINSPRING	1	TX455	L/H BEECH STOCK	1
			TX460	TRIGGER GUARD SCREW	1

IT IS HIGHLY RECOMMENDED THAT ONLY GENUINE AIR ARMS PARTS ARE USED. THE USE OF NON GENUINE PARTS <u>WILL</u> INVALIDATE YOUR WARRANTY.

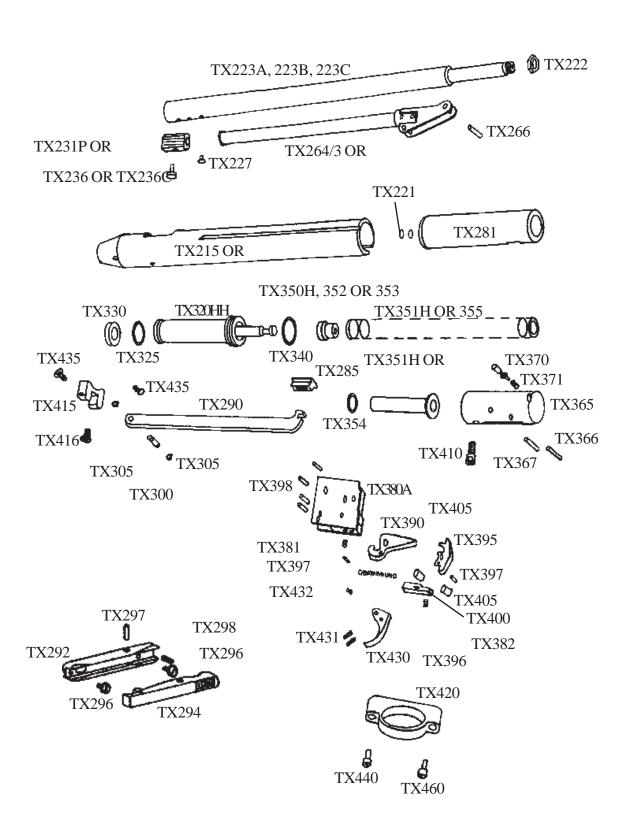

WARRANTY

Limited One-Year Warranty

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship and is transferable.

What is covered:

Replacement parts and labor. Transportation charges to consumer for repaired product.

What is NOT covered:

Transportation charges to Air Venturi for defective products. Damages caused by abuse or failure to perform normal maintenance. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Warranty claims:

Warranty claims for U.S. and Canadian Customers:

Please return product to Air Venturi. Call Air Venturi at 216-292-2570 before returning any product.

Implied warranties:

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

Air Venturi Air Venturi.com • 216-292-2570



DO NOT TRY TO DISASSEMBLE THE GUN. Your rifle needs special tools and Air Arms parts in order to be repaired. If you disassemble it, you may not be able to properly reassemble it. Air Arms does not assume any warranty liability under such circumstances.

Notes