

# Smith & Wesson

## S&W 1911 S Blank Firing Pistol

cal. 9 mm P.A.K.



### OPERATION INSTRUCTIONS

## Smith & Wesson



### CAUTION

It should be remembered that even the safest gun is potentially dangerous to you and others when it is not properly handled. Read and understand the operating instructions and learn how the gun works and is to be handled. Always treat any gun as if it were loaded.

A gun can only be safe as long as it is in flawless operating condition. Incorrect handling and lack of maintenance may lead to malfunctions and reduced safety of the gun. Always be aware of possible risks from dropping your pistol or from corrosion or other external influences. In such cases, have your gun inspected by a competent gunsmith before using it again. Unauthorized modifications to the mechanism, damage caused by the application of force, or modifications performed by third parties will result in the manufacturer not assuming any liability. Only an Umarex USA gunsmith is qualified to work on this blank firing gun. Contact Umarex USA for repairs.

**▲ WARNING:** KEEP YOUR FINGER AWAY FROM THE TRIGGER UNLESS YOU INTEND TO FIRE. ALWAYS KEEP YOUR GUN POINTED IN A SAFE DIRECTION SO THAT YOU AND OTHERS CANNOT BE ENDANGERED.

**▲ WARNING:** DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC – IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

### CONTENTS

**1** | 

Description

**2** | 

Operation

 
**3** | 

Safety instructions

**⚠ WARNING:** FAILURE TO FOLLOW BASIC GUN SAFETY AND THE OPERATING INSTRUCTIONS FOR YOUR PISTOL MAY CAUSE SERIOUS PERSONAL INJURY OR DEATH. DESIGNED FOR EXPERIENCED SHOOTERS. RECOMMENDED FOR ADULT USE ONLY.

## 1.1 | THE PARTS OF YOUR NEW PISTOL

If you learn the names of the parts of your pistol, you'll find it easier to understand these instructions. Read the manual carefully to get the most out of your new blank firing pistol.

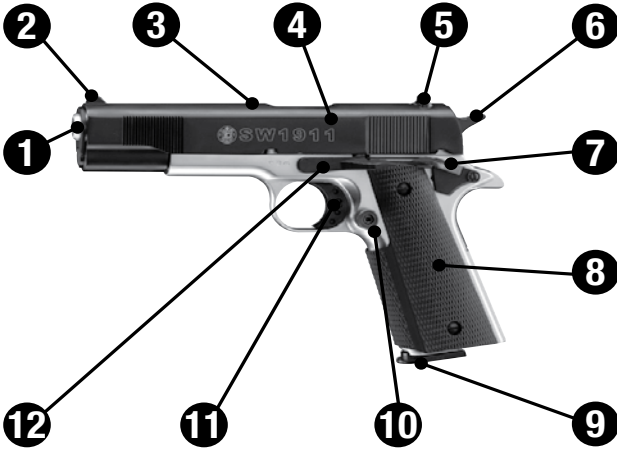

- |   |             |    |                  |
|---|-------------|----|------------------|
| 1 | muzzle      | 7  | safety           |
| 2 | front sight | 8  | grip             |
| 3 | gas port    | 9  | magazine         |
| 4 | slide       | 10 | magazine release |
| 5 | rear sight  | 11 | trigger          |
| 6 | hammer      | 12 | slide release    |

**⚠ WARNING:** NEVER AIM AT PEOPLE EVEN IF THE PISTOL IS NOT LOADED. THE PISTOL SHOULD NOT BE FIRED POINT-BLANK RANGE AS SEVERE INJURIES CAN BE CAUSED.

## 2.1 | HANDLING OF THE SAFETY

**⚠ WARNING:** IT SHOULD BE MADE A COMMON HABIT TO LEAVE THE MANUAL SAFETY ENGAGED UNTIL YOU REALLY INTEND TO FIRE.

To engage the safety, turn the safety lever as shown in fig. 1. Push it to its upper position to put in „ON SAFE“. To put it off safe (fire), push the safety lever to its lower position.

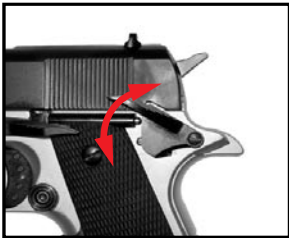 


fig. 1

**⚠ WARNING:** MAKE SURE THAT THE PISTOL IS UNLOADED (CHAMBER CLEARED OF ANY OBSTRUCTIONS, MAGAZINE EMPTY) BEFORE INSPECTION AND THAT THE SAFETY IS ENGAGED (ON SAFE).

## 2.3 | INSPECTION AFTER USE

**⚠ CAUTION:** ALWAYS BE EXTREMELY CAREFUL AND AVOID SITUATIONS WHICH COULD LEAD TO AN ACCIDENT.

**⚠ WARNING:** MAKE SURE THAT THE PISTOL IS UNLOADED (CHAMBER MUST BE CLEAR) AFTER USE AND MAKE CERTAIN THAT THE MAGAZINE IS EMPTY.

## 2.2 | INSPECTION BEFORE USE AND HOW TO DECOCK

1. Check to make sure the chamber and magazine are empty. Remove the magazine, retract the slide. After the slide has been released, the recoil spring will return the slide fully forward into battery.

2. To decock the gun (check to make sure the chamber is empty), hold the hammer with your thumb, pull the trigger and let the hammer slowly travel forward. Insert the empty magazine and engage the safety (put ON SAFE).

**⚠ WARNING:** THIS PISTOL UTILIZES BLANK CARTRIDGES WHICH CONFORM WITH SAAMI STANDARDS OR CIP STANDARDS RESPECTIVELY. PLEASE NOTE THE CHAMBER IS ONLY DESIGNED TO ACCEPT BLANK CARTRIDGES. IT IS NOT DESIGNED TO ACCEPT ANY FIXED AMMUNITION CARTRIDGE OR LIVE CARTRIDGE. BEFORE USING THIS PISTOL PLEASE CAREFULLY READ THE "OPERATING INSTRUCTIONS" AND THE "SAFETY PRECAUTIONS". ONLY WHEN YOU ARE CERTAIN YOU HAVE FULLY FAMILIARIZED YOURSELF WITH THE FUNCTION OF YOUR GUN SHOULD YOU PRACTICE LOADING, UNLOADING AND FIRING.

## 2.4 | LOADING THE MAGAZINE

**⚠ WARNING:** NEVER USE ANYTHING OTHER THAN 9 MM P.A.K. BLANK CARTRIDGES. WE RECOMMEND UMAREX BRAND CARTRIDGES.

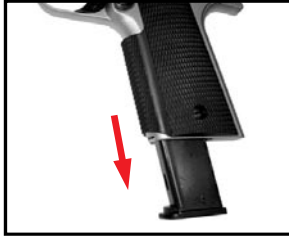 


fig. 2



fig. 3

The magazine is released by depressing the magazine release with the thumb. It may then be removed from the magazine well by pulling it downwards (fig. 2). Hold the magazine in your left hand and insert up to 9 cartridges with your right hand (fig. 3).

**⚠ WARNING:** NEVER AIM AT PEOPLE EVEN IF THE PISTOL IS NOT LOADED. DO NOT FIRE THE PISTOL AT POINT-BLANK RANGE AS SEVERE INJURIES CAN BE CAUSED.

## 2.5 | LOADING THE PISTOL

To load the pistol, insert the loaded magazine into the magazine well and push it fully home until it locks. The pistol is now loaded. Pull the slide back and then release it. The slide will quickly travel forward, will chamber a round and will be cocked. Now the gun is ready to fire. It should be handled with the utmost care.

## 2.6 | UNLOADING THE PISTOL



fig. 4

If the pistol stops shooting while cartridges are still left in the magazine, unload the pistol as follows:

Remove the magazine from the magazine well, pull the slide back to extract and eject the round from the chamber (fig. 4). Then decock the pistol as stated in 2.2 on page 4.

**⚠ CAUTION: PINCH POINT** AVOID CONTACT WITH MOVING PARTS.

**⚠ WARNING:** MAKE A VISUAL INSPECTION OF THE CHAMBER - IT MUST BE CLEAR!

5 |

## 2.7 | SLIDE RELEASE

After the last cartridge is fired, the slide automatically remains in its rearmost position. After a loaded magazine has been inserted, slight pressure downward on the slide release is sufficient to release the slide which will travel forward and chamber a new round (see fig. 5). The gun is now ready to fire again.

## 2.8 | FIRING BLANKS

Push the safety lever down, the safety is now disengaged.

**CAUTION:** The pistol is now ready to fire.

Always hold the pistol in a safe direction and in a way that you and other persons are not endangered. We recommend the use of personal protective equipment consisting of ear plugs and protective shooting glasses. After each round fired, the pistol automatically reloads a new cartridge. This action will be repeated until the magazine is empty.

After the last cartridge is fired, the slide automatically remains in its rearmost position. If firing is to be continued, the empty magazine is to be exchanged for a full one. Slight pressure of the thumb on the slide

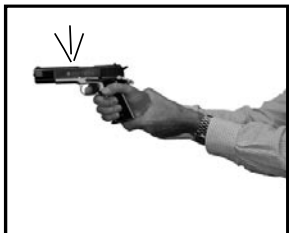 


fig. 6



fig. 7

release will release the slide which will travel to its forward position, taking a new cartridge with it and chamber it (fig. 5). The pistol is again ready to fire.



fig. 5

**⚠ WARNING:** NEVER FIRE THE PISTOL VERTICALLY! NEVER AIM THE PISTOL AT PETS OR HUMANS! ONLY USE IT IN THE OPEN! MAKE SURE YOUR SHOOTING AREA IS CLEAR AND THAT YOU ARE SUFFICIENTLY FAR AWAY FROM FLAMMABLE OBJECTS!

**⚠ WARNING:** THE PISTOL IS READY TO FIRE. PER SAFETY INSTRUCTIONS LEAVE YOUR FINGER OFF THE TRIGGER AND OUT OF THE TRIGGER GUARD UNTIL IT IS POINTED IN A SAFE DIRECTION AND YOU INTEND TO SHOOT.

**⚠ WARNING:** POWDER GAS WILL ESCAPE FROM THE PISTOL NEAR THE CHAMBER! WHEN FIRING THE PISTOL ALWAYS HOLD THE GUN HORIZONTALLY WITH ARM OUTSTRETCHED TO AVOID BEING INJURED BY ESCAPING HOT POWDER AND GAS (see figures 6 and 7).

**⚠ WARNING:** WEAR EYE AND EAR PROTECTORS SPECIFIED FOR FIREARM USE EVERY TIME YOU DISCHARGE YOUR BLANK FIRING GUN. MAKE SURE OTHERS IN THE VICINITY OF WHERE YOU WILL BE SHOOTING DO SO AS WELL. FAILURE TO FOLLOW THIS WARNING WILL CAUSE SERIOUS PERSONAL INJURY.

**⚠ WARNING:** ALWAYS INSPECT YOUR PISTOL VISUALLY TO BE SURE THE HAMMER AND TRIGGER ARE IN THE AT REST OR FORWARD POSITION BEFORE CARRYING OR STORING IT. NEVER HOLSTER, CARRY OR STORE YOUR PISTOL WITH THE HAMMER COCKED. REMEMBER TO KEEP YOUR GUN POINTED IN A SAFE DIRECTION. NEVER LEAVE A LOADED GUN UNATTENDED.

## CLEANING AND MAINTENANCE

In order to keep the gun functional and to extend its service life, the Smith & Wesson 1911 S should be cleaned and maintained at regular intervals. After every use, we strongly recommend to disassemble, clean and lubricate the pistol, and keep it in a safe, secure and dry place. To clean the gun brush the chamber with the enclosed brush. Then dry and oil it. It is advisable to lubricate with oil, before using the pistol after an extended period of inactivity.

**⚠ WARNING:** BEFORE ANY MAINTENANCE, MAKE SURE THAT THE PISTOL IS UNLOADED (CHAMBER CLEARED OF ANY OBSTRUCTIONS, MAGAZINE EMPTY) AND THAT THE SAFETY IS ENGAGED (ON SAFE).

## REPAIR OF UMAREX-PISTOLS

**⚠ WARNING:** A GUN WHICH FAILS TO FUNCTION PROPERLY IS DANGEROUS. IT SHOULD BE SAFELY STORED IN A WAY THAT PREVENTS ITS USE BEFORE IT IS REPAIRED. IT IS DIFFICULT TO REPAIR A GUN, AND IMPROPER ASSEMBLY CAN LEAD TO DANGEROUS MALFUNCTIONS OR SERIOUS INJURY. CONTACT UMAREX USA SERVICE DEPARTMENT FOR REPAIRS. PHONE: 479-646-4210.

## STORAGE

Keep this pistol and ammunition away from children and unauthorized persons. Guns should be stored separately from ammunition. Check to make sure gun is unloaded when removing from storage or getting from another person.

**⚠ WARNING:** NEVER STORE A LOADED PISTOL AND NEVER LEAVE A LOADED PISTOL UNATTENDED!

## SPECIFICATIONS

Calibre:	9 mm P.A.K.
Length:	220 mm (8.6 in.)
Height:	140 mm (5.5 in.)
Width:	33 mm (1.3 in.)
Length of barrel:	129 mm (5.0 in.)
Weight:	940 g (2.0 lbs.)
capacity:	9 rounds

7 |

# 3.1 | WARRANTY

This product is warranted to the retail consumer for one (1) year from date of purchase against defects in material and workmanship and is not transferable.

**WHAT IS COVERED** - Replacement parts and labor.

**WHAT IS NOT COVERED** - Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**WARRANTY CLAIMS** - Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$14.95 to cover shipping and handling. **NEVER SHIP A LOADED GUN. NEVER SHIP A GUN WITH AMMO.**

**IMPLIED WARRANTIES** - Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

To validate this warranty - Send in the registration card within 30 days to: Umarex USA, 6007 South 29th Street, Fort Smith, Arkansas 72908 or Register online at [www.UmarexUSA.com](http://www.UmarexUSA.com).

**⚠ WARNING:** THE COMPONENTS OF YOUR BLANK FIRING GUN WERE ENGINEERED AND MANUFACTURED TO DELIVER OPTIMUM PERFORMANCE. ANY MODIFICATION OR TAMPERING WITH YOUR GUN MAY CAUSE A MALFUNCTION, WILL VOID YOUR WARRANTY, AND MAY MAKE IT UNSAFE TO USE. ANY CHANGE IN PERFORMANCE (SUCH AS A LOWERED TRIGGER PULL FORCE AND SHORTENED TRIGGER TRAVEL), INDICATES POSSIBLE MODIFICATION, TAMPERING, AND/OR WEAR. SUCH GUN SHOULD BE INSPECTED, REPLACED, OR PROPERLY REPAIRED BY ONLY QUALIFIED UMAREX USA PERSONNEL. ANY GUN THAT HAS BEEN DROPPED SHOULD BE CHECKED BY QUALIFIED PERSONNEL TO ENSURE THAT ITS FUNCTION HAS NOT BEEN AFFECTED.

## 3.2 | SAFETY INSTRUCTIONS

- Safe gun handling is YOUR personal responsibility at all times. Safety must be the prime consideration of anyone who owns or handles any gun.
- The safety of the pistol should be engaged at all times! Only disengage the safety when you intend to shoot. Pistols without a safety should always be carried with the chamber clear and magazine removed.
- Before putting down the pistol always make sure that it is not loaded. Remove the magazine and verify that no cartridges are in the chamber.
- Guns and ammunition are to be stored separately from each other in order to keep them away from unauthorized persons or children.
- Always check to make certain a gun is unloaded when getting from storage or another person.
- Always bear in mind that even the safest gun may be dangerous for you and others if improperly handled.
- Never place your finger inside the trigger guard unless you intend to fire.
- Always hold your gun in a way that neither you or other persons are endangered, because at distances of less than 5 ft, even a blank firing gun can cause serious injuries or even death.
- Keep the pistol away from heat sources and flames.
- Utilize only blank cartridges.
- The gun must only be fired horizontally into the air, with the arm stretched out.
- Pay attention to the ejection of the cartridge on the right side of the pistol. Make certain that you are a safe distance from any person or object to avoid possible injury by an ejected cartridge.
- Always wear ear protection and protective shooting glasses when shooting.
- In the event of a misfire, remove the magazine and remove the cartridge in the chamber by hand. Do not reuse this unexploded cartridge. Dispose of properly.
- Prior to transporting blank firing guns, please keep yourself informed about the legal regulations in your state and local areas.
- Umarex and Umarex USA decline any and all responsibilities for improper use of this blank firing pistol. For details, refer to the appropriate legal instructions.
- In case of tampering with the pistol, Umarex and Umarex USA decline any Civil and Penal responsibilities and will not indemnify any damage.
- The user is liable for any damage caused to oneself and/or to third persons.



Distributed by / Distribué par:

**UMAREXUSA**

**Umarex USA Inc.**  
6007 South 29th Street - Fort Smith, AR 72908 USA

Phone: (479) 646-4210 - Fax: (479) 646-4206  
[www.umarexusa.com](http://www.umarexusa.com)