



UNDERLEVER PELLET AIR RIFLE

.177 CALIBER (4.5MM) .22 CALIBER (5.5MM)





User Instruction Manual

ALWAYS FOLLOW THESE SAFETY WARNINGS

NOT A TOY, ADULT SUFERVISION TO SUPERVISION TO SUPE

DEATH. MAY BE DANGEROUS UP TO 500 YARDS (457 METERS).

WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC; IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION OR MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

WARNING: THIS IS A HIGH POWERED AIRGUN INTENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRGUN.

WARNING: BE SURE THE AIRGUN IS ALWAYS POINTED IN A SAFE DIRECTION. NEVER POINT THE AIRGUN AT ANYONE EVEN IF IT IS UNLOADED. ALWAYS ASSUME AND HANDLE THE AIRGUN AS IF IT WERE LOADED AND READY TO FIRE.

WARNING: THIS PHODUCT CAN LAT COLL TO THE STATE OF INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM, FOR MORE INFORMATION GO TO WWW.P65WARNINGS.CA.GOV

AIMPORTANT

YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR SAFETY GLASSES TO PROTECT YOUR EYES. READ ALL INSTRUCTIONS BEFORE USING.




Page #	CONTENTS
3	Rules of Safe Shooting
4	Learning the Parts of Your New Air Rifle
5	Operating the Safety
5	Extending the Cocking Lever
6	Cocking, Loading & Firing
7	Aiming & Sight Adjustment
8	Warranty

RULES OF SAFE SHOOTING

- NEVER point the airgun at any person.
- NEVER point the airgun at anything you do not intend to shoot.
- ALWAYS treat the airgun as if it was loaded and handle it with the same respect you would a
 firearm.
- ALWAYS aim in a SAFE DIRECTION. ALWAYS keep the muzzle pointed in a SAFE DIRECTION.
- NEVER put any part of your hand over the muzzle.
- ALWAYS keep the airgun ON "SAFE" until you are ready to shoot in a SAFE DIRECTION.
- Check behind and beyond your target to be certain you have a safe backstop and that no person or property can be endangered.
- Place the backstop in a location that will be safe should the backstop fail.
- Replace the backstop if it becomes worn.
- ALWAYS be sure of your target and what lies beyond it in case you miss.
- NEVER shoot at hard surfaces, water or anything else that may cause a ricochet.
- This airgun may only be used where your local laws permit or at shooting ranges allowed by the law, and only if the ammunition does not travel further than the shooting area. Keep in mind the maximum range of the ammunition. ALWAYS abide by laws and regulations that apply to airguns.
- ALWAYS check to see if the airgun is ON "SAFE" and unloaded when getting it from another
 person or from storage.
- ALWAYS keep your finger off the trigger and away from the trigger guard until ready to shoot.
- You and others with you should ALWAYS wear safety shooting glasses to protect your eyes.
- If your reading or prescription glasses are not certified safety glasses, make sure you wear shooting glasses over your regular glasses.
- The shooter and everyone in the vicinity should wear hearing protection when shooting and filling guns with high pressure air.
- NEVER load your gun until you're ready to shoot and it's safe to do so.
- ALWAYS use the correct caliber ammunition that is suitable for the airgun. Use ONLY ammunition
 designed for this airgun.
- NEVER reuse ammunition.
- ALWAYS store the airgun with the safety ON "SAFE", unloaded, uncocked, separated from the ammunition, out of the reach of children, and in a secure location to prevent unauthorized people from accessing it.
- DO NOT attempt to disassemble or tamper with the airgun.
- DO NOT put the airgun away loaded.
- ALWAYS store this airgun in a safe location.
- ALWAYS store ammunition separately from the gun.
- **NEVER** leave the airgun loaded if it is out of your reach.
- ALWAYS unload the airgun before giving it to someone else.
- ALWAYS read and follow the manufacturer's manual and instructions.
- NEVER let a person who has not completely read this manual use this product.

LEARNING THE PARTS OF YOUR NEW AIR RIFLE

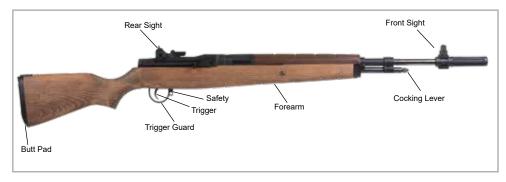



BE SURE THE AIRGUN IS ALWAYS POINTED IN A SAFE DIRECTION, NEVER POINT THE AIRGUN AT ANYONE EVEN IF IT IS UNLOADED. ALWAYS ASSUME AND HANDLE THE AIRGUN AS IF IT WERE LOADED AND READY TO FIRE.

OPERATING THE SAFETY

The M1A has a manual safety that can be engaged at any time by the user. Locate the safety switch at the front of the trigger guard.

- To engage the safety, press the safety switch to the forward position.(fig. 1a).
- To disengage the safety, press the safety switch to the rear position. (fig. 1b).





WARNING: KEEP THE AIRGUN ON SAFE UNTIL YOU ARE READY TO SHOOT, THEN PUSH THE SAFETY OFF.

EXTENDING THE COCKING LEVER

The cocking lever on your M1A is extendable to allow for more leverage during the cocking cycle.

- To extend the cocking lever: Pull down on the cocking lever until it releases from the closed position (Fig. 1a). Once released, simply pull the knurled end of the lever out to extend the lever (Fig. 1b). The lever is fully extended when it cannot be pulled any further.
- To collapse the cocking lever: With the cocking lever released from the closed position, press the knurled end of the lever back into the housing until the knurled end of the lever cannot be depressed any further. Once fully depressed, you can return the cocking lever to the closed position.





COCKING, LOADING AND FIRING

Pull down on the cocking lever until it releases from the closed position (Fig. 1).

With a firm hold on the cocking lever, pull the lever down until it comes to a solid stop (Fig. 2). You will hear a click indicating that the rifle is now cocked, and there will no longer be tension on the cocking lever. In addition, the hand guard will have moved forward, fully exposing the loading breech.

Continue to keep a firm hold on the cocking lever with one hand. Insert the correct caliber lead pellet into the end of the barrel, exposed in the loading breech (Fig. 3). Take care to seat the pellet flush with the end of the barrel to avoid damage to the pellet skirt.

While holding onto the cocking lever with one hand, press down on the cocking release tab with your free hand (Fig. 4). Once depressed you can return the cocking lever to the closed position (Fig. 5). Make sure the cocking lever is securely latched in the closed position before attempting to fire.













Before shooting, always make sure that the target, backstop and surrounding area are safe. Squeeze the trigger with a firm, consistent pull, gradually applying more pressure until the shot is fired.

CAUSING INJURY.


A IMPORTANT

YOU AND OTHERS WITH YOU SHOULD ALWAYS
WEAR SHOOTING GLASSES TO PROTECT YOUR

EYES. READ ALL INSTRUCTIONS BEFORE USING. BUYER AND USER HAVE THE RESPONSIBILITY TO OBEY ALL LAWS ABOUT THE PURCHASE, USE AND OWNERSHIP OF THIS AIRGUN.

WARNING: BE SURE THE AIRGUN IS ALWAYS POINTED IN A SAFE DIRECTION. NEVER POINT THE AIRGUN AT ANYONE EVEN IF IT IS UNLOADED. ALWAYS ASSUME AND HANDLE THE AIRGUN AS IF IT WERE LOADED AND READY TO FIRE.


AIMING & SIGHT ADJUSTMENT

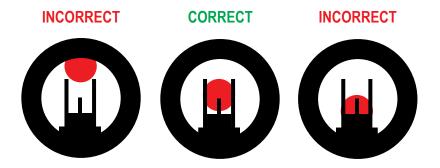

The rear sight on your M1A is adjustable for both windage and elevation.

Elevation adjustment: If the point of impact is too high: turn screw clockwise. If the point of impact is too low: turn screw counterclockwise.

Windage adjustment: If the point of impact is too far left: turn the screw clockwise. If the point of impact is too far right: turn screw counter-clockwise.

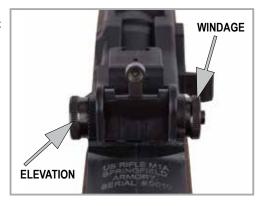

One-Year Limited Warranty

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship. In the unlikely event there are any defects in materials or workmanship in the first twelve (12) months after retail purchase, we will repair or replace the defective items under warranty.

What is covered:

Replacement parts and labor. Transportation charges to consumer for repaired product.

What is NOT covered:

- Transportation charges to Air Venturi for defective products.
- Any damage or faults caused by owner misuse, action or inaction.
- Damages caused by abuse or failure to perform normal maintenance.
- Any other expense.
- Parts subject to normal wear and tear.
- Consequential damages, incidental damages or incidental expenses including damage to property.

This warranty is in addition to your statutory rights. Retain your sales receipt as proof of purchase.

NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty claims:

Call Air Venturi at 216-220-1180 before returning any product.

Implied warranties:

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase.

NOTE: Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent any provision of this warranty is prohibited by federal, state or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country. Illustrations and photographs are for information purposes only and may not show the exact model purchased.

The warranty shall be invalid if the Airgun:

- · Has been incorrectly disassembled, reassembled or maintained.
- Has been fitted with non-Air Venturi parts.
- Has been abused, misused or improperly stored.
- · Original purchase receipt cannot be presented.

NOTES	

NOTES	

NOTES	

SPRINGFIELD ARMORY USA

DEFEND YOUR LEGACY



Air Venturi®, Ohio, USA is the exclusive worldwide Licensee for all Springfield Armory® replica firearms and accessories manufactured in regard to their intellectual properties (IP) rights. All rights are inclusive of all type, models and kinds of Airguns and Airguns replica firearms, components, CO2 and accessories.



AIR VENTURI®
5135 Naiman Parkway, Cleveland, OH 44139
216-292-2570 • fax 216-373-0086