




2128 AIR COMPRESSOR PUMP

Replacement of outlet air filter element Z2128-100

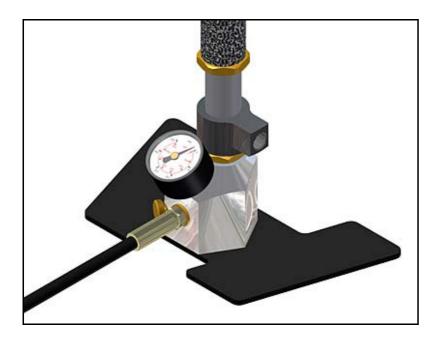



- Unscrew the hexagon connector on top of the base housing 1) to remove the pump.
- Withdraw the filter from its seat in the bottom of the housing. 2)
- 3) Refit the new replacement filter by carefully placing it into the housing seat. Fit new O'Ring where necessary.
- Refit the pump and tighten the hexagon connector.
- 4) 5) The pump is now ready for use.

