



Important instructions for the use of blank firing guns.

It should be remembered that even the safest gun is potentially dangerous to you and others when it is not properly handled. Read and understand the operating instructions and learn how the gun works and is to be handled. Always treat any gun as if it were loaded.

WARNING: KEEP YOUR FINGER AWAY FROM THE TRIGGER UNLESS YOU INTEND TO FIRE. ALWAYS KEEP YOUR GUN POINTED IN A SAFE DIRECTION SO THAT YOU AND OTHERS CANNOT BE ENDANGERED.

A gun can only be safe as long as it is in flawless operating condition. Incorrect handling and lack of maintenance may lead to malfunctions and reduced safety of the gun. Always be aware of possible risks from dropping your pistol or from corrosion or other external influences. In such cases, have your gun inspected by a competent gunsmith before using it again. Unauthorized modifications to the mechanism, damage caused by the application of force, or modifications performed by third parties will result in the manufacturer not assuming any liability. Only an Umarex USA gunsmith is qualified to work on this blank firing gun. Contact Umarex USA for repairs.

Table of contents	Page
Components	1
General	2
Inspections	3
Loading the revolver	4
Firing	5
Decocking the hammer	5
Unloading the revolver	5
Cleaning and maintenance	5
Storage	6
Repairs	6
Warranty	6-7
Important instructions	7-8
Technical data	9
Contact	9

CAUTION: Prior to transporting blank firing guns, please keep yourself informed about the legal regulations in vour state and local areas.

## **INSPECTION BEFORE USE**



Make sure that the revolver is unloaded (chamber cleared of any obstructions, cylinder empty) before inspection.

#### **Functional inspection**

1. By pressing the cylinder release on the left side of the crane frame, the cylinder can be swung out to make sure the chamber is empty.

2. Press back the cylinder into the frame after checking.

### **INSPECTION AFTER USE**

Make sure that the revolver is unloaded (chamber must be clear) after each use. CAUTION:

Always be extremely careful and avoid situations which could lead to an accident. CAUTION:

If you drop the gun with the safety off, accidental shots might be fired that may cause personal CAUTION: injury or damage. Carefully handle the gun and deactivate the safety only if you intend to shoot.

CAUTION: This revolver utilizes blank cartridges which conform with SAAMI standards or CIP standards respectively. Please note the chamber is ONLY designed to accept blank cartridges. It not designed to accept any fixed ammunition cartridge or live cartridge. Before using this revolver please carefully read the "Operating Instructions" and the "Safety Precautions". Only when you are certain you have fully familiarized yourself with the function of your gun should you practice loading, unloading and firing.

#### LOADING

By pressing the cylinder release on the left side of the frame, the cylinder can be swung out to the left for loading. Press back the cylinder into the frame after loading (see fig.1). As soon as the cylinder is returned and locked into position the revolver is ready to fire. Only use 9 mm R.K. cartridges.



The revolver is ready to fire. Per safety instructions leave your trigger finger off the trigger until it is CAUTION: pointed in a SAFE DIRECTION and you intend to shoot.

NEVER USE CARTRIDGES NOT SPECIFICALLY DESIGNATED FOR USE IN YOUR BLANK WARNING: FIRING GUN. FAILURE TO USE THE CORRECT TYPE OR CALIBER OF CARTRIDGE MAY CAUSE THE GUN TO JAM. FAIL TO FIRE OR EVEN GENERATE EXCESSIVE PRESSURE WHICH CAN DAMAGE OR EVEN RUPTURE YOUR GUN, CAUSING PERSONAL INJURY, DEATH OR PROPERTY DAMAGE.

WEAR EYE AND EAR PROTECTORS SPECIFIED FOR FIREARM USE EVERY TIME YOU WARNING: DISCHARGE YOUR BLANK FIRING GUN. MAKE SURE OTHERS IN THE VICINITY OF WHERE YOU WILL BE SHOOTING DO SO AS WELL. FAILURE TO FOLLOW THIS WARNING WILL CAUSE SERIOUS PERSONAL INJURY.

#### FIRING

The gun can be fired single or double action. "Double action" means that you can fire a shot by only pulling the trigger; "Single action" means that you have to cock the hammer manually.

WARNING: POWDER GAS WILL ESCAPE FROM THE PISTOL NEAR THE CHAMBER! WHEN FIRING THE PISTOL ALWAYS HOLD THE GUN HORIZONTALLY WITH ARM OUTSTRETCHED TO AVOID BEING INJURED BY ESCAPING HOT POWDER AND GAS (SEE FIGURES 2 AND 3).

WARNING: ALWAYS KEEP YOUR FINGERS AWAY FROM THE AREA BETWEEN THE CYLINDER AND THE BARREL DURING FIRING. PARTICLES AND HOT GAS WILL BE FORCED OUT FROM BETWEEN THE BARREL AND CYLINDER IN ANY REVOLVER DURING NORMAL USE.FAILURE TO FOLLOW THIS WARNING WILL CAUSE SERIOUS PERSONAL INJURY.

#### **DECOCKING THE HAMMER**

Point the muzzle in a SAFE DIRECTION. Hold the hammer with your thumb, pull the trigger and let the hammer slowly travel forward.

#### UNLOADING

Swing out the cylinder as explained before and eject the empty cases with the ejector rod (see fig.4). In order to avoid malfunction the gun should be cleaned thoroughly after each shooting session.

#### **CLEANING AND MAINTENANCE**

In order to keep the gun functional and to extend its service life, the Smith & Wesson Chiefs Special S should be cleaned and maintained at regular intervals.

**CAUTION:** Before any maintenance, swing out the cylinder, and inspect the cylinder to make sure it is empty.

### STORAGE

CAUTION: Never store a loaded pistol and never leave a loaded pistol unattended!

Keep this revolver and ammunition away from children and unauthorized persons. Guns should be stored separately from ammunition. Check to make sure gun is unloaded when removing from storage or getting from another person.

WARNING: ALWAYS INSPECT YOUR REVOLVER VISUALLY TO BE SURE THE HAMMER AND TRIGGER ARE IN THE AT REST OR FORWARD POSITION BEFORE CARRYING OR STORING IT. NEVER HOLSTER, CARRY OR STORE YOUR REVOLVER WITH THE HAMMER COCKED. REMEMBER TO KEEP YOUR GUN POINTED IN A SAFE DIRECTION. NEVER LEAVE A LOADED GUN UNATTENDED.

#### **REPAIR OF UMAREX-REVOLVERS**

**CAUTION:** A gun which fails to function properly is dangerous. It should be safely stored in a way that prevents its use before it is repaired. It is difficult to repair a gun, and improper assembly can lead to dangerous malfunctions or serious injury. Contact Umarex USA service department for repairs. Phone: 479-646-4210.

 
#### **ONE YEAR LIMITED WARRANTY**

This product is warranted to the retail consumer for one (1) year from date of purchase against defects in material and workmanship and is not transferable.


WHAT IS COVERED—Replacement parts and labor.

WHAT IS NOT COVERED—Shipping charges to Umarex USA for defective product and damages caused by abuse or failure to perform normal maintenance as well as any other expense. Consequential damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**WARRANTY CLAIMS**—Warranty Claims and Repair for U.S. and Canadian customers only. Call Umarex USA (479)-646-4210 and ask for the Service Department. If it is determined a return is necessary, you will be issued a Return Authorization Number. Write this number boldly on the box and return the product prepaid to Umarex USA. Your name, address, phone number and a note explaining the defect found must be included in the package. A copy of the original purchase receipt must accompany the return. Include a check made to Umarex USA in the amount of \$14.95 to cover shipping and handling. NEVER SHIP A LOADED GUN. NEVER SHIP A GUN WITH AMMO.



**CAUTION:** Keep the revolver pointing in a SAFE DIRECTION and make sure that the chamber is clear when decocking it to prevent injury.

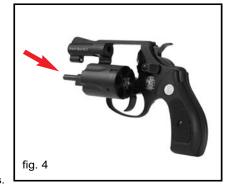

5

IMPLIED WARRANTIES-Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one (1) year from date of retail purchase. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. TO THE EXTENT ANY PROVISION OF THIS WARRANTY IS PROHIBITED BY FEDERAL, STATE, OR MUNICIPAL LAW WHICH CANNOT BE PREEMPTED, IT SHALL NOT BE APPLICABLE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

TO VALIDATE THIS WARRANTY-Send in the registration card within 30 days to: Umarex USA, 6007 South 29th Street, Fort Smith, Arkansas 72908 or Register online at www.UmarexUSA.com.

When transporting any gun, make sure that it is unloaded. **IMPORTANT:** 

CAUTION: Prior to transporting blank firing guns, please keep yourself informed about the legal regulations in vour state and local areas.

DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - IT MAY CONFUSE PEOPLE WARNING: AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

CAUTION: The components of your blank firing gun were engineered and manufactured to deliver optimum performance. Any modification or tampering with your gun may cause a malfunction, will void your warranty, and may make it unsafe to use. Any change in performance (such as a lowered trigger pull force and shortened trigger travel), indicates possible modification, tampering, and/or wear. Such gun should be inspected, replaced, or properly repaired by only qualified Umarex USA personnel. Any gun that has been dropped should be checked by gualified personnel to ensure that its function has not been affected.

```
7
```

### CAUTION: Important instructions for the handling and use of blank firing guns!

- Safe gun handling is YOUR personal responsibility at all times. Safety must be the prime consideration of anyone who owns or handles any gun.
- · Pistols without a safety should always be carried with the chamber clear and magazine removed, or cylinder unloaded.
- · Before putting down the revolver always make sure that it is not loaded. Remove the magazine and verify that no cartridges are in the chamber.
- · Guns and ammunition are to be stored separately from each other in order to keep them away from unauthorized persons or children.
- Always check to make certain a gun is unloaded when getting from storage or another person.
- Always bear in mind that even the safest gun may be dangerous for you and others if improperly handled.
- Never place your finger inside the trigger guard unless you intend to fire.

• Always hold your gun in a way that neither you or other persons are endangered, because at distances of less than 5 m, even a blank firing gun can cause serious injuries or even death.

- · Keep the revolver and ammunition away from heat sources and flames.
- · Use only blank cartridges.
- The gun must only be fired horizontally into the air, with the arm stretched out.
- After every use, we strongly recommend to clean and lubricate the revolver, and keep it in a safe, secure and dry place. To clean the gun brush the chamber with the enclosed brush. Then dry and oil it.

It is advisable to lubricate with oil, before using the revolver after an extended period of time of inactivity.

· Always wear ear protection and protective shooting glasses when shooting.

• In the event of a misfire, open cylinder and remove the cartridges in the chamber by pressing the ejector rod.

· Do not utilize unexploded cartridges.

· Prior to transporting blank firing guns, please keep yourself informed about the legal regulations in your state and local areas.

• Umarex and Umarex USA decline any and all responsibilities for improper use of this blank pistol. For details, refer to the appropriate legal instructions.

• In case of tampering with the pistol, Umarex and Umarex USA decline any Civil and Penal responsibilities and will not indemnify any damage.

• The user is liable for any damage caused to oneself and to third persons.



Technical data	
caliber	9 mm R.K.
overall length	6-3/8 in. / 162 mm
height	4-1/4 in. / 110 mm
width	1-3/8 in. / 33 mm
barrel length	1-7/8 in. / 32 mm
weight	16 oz. / 550 g
capacity	5 shots / 5 coups

# UMarexusa®

Umarex USA Inc. 6007 South 29<sup>th</sup> Street Fort Smith, AR 72908 USA Phone: (479) 646-4210 Fax: (479) 646-4206 www.umarexusa.com

09R07