

WILLIAMS 64 PEEP SIGHT ADJUSTMENT

Adjusting Elevation -

- Loosen screw A to allow the elevation slide to move up and down.
- You can move the elevation slide manually by hand or move it up and down by turning screw B. Clockwise will raise the sight and counterclockwise will lower the sight.
- Once desired elevation is achieved, tighten screw A to lock in place.

Adjusting Windage (left/right position)

- Loosen both screws C and D.
- Manually move the sight to the desired position
- Tighten screws C and D to lock windage adjustment into place.

