HOW TO USE THE S200 MAGAZINE SYSTEM.

To use, load the magazine with pellets and insert into the body fitted to the gun. Once the magazine is located and the bolt pushed forward the mechanism will self index and will behave like any automatic reloading system.









In **Fig. 9** and **Fig. 10** you can see a key and key slot. When inserting the magazine into the body the slot must slide over the key otherwise the magazine will not locate into the main body.

Fig. 11 shows the magazine being pushed into the body.

Once the magazine is inserted it needs to be held in place whilst the loading bolt is pushed forwards **Fig.12**, this is only required the first time the magazine is fitted after reloading. From then on the magazine

will hold itself in place. Once the magazine is loaded you can use it as you would any self indexing auto-load system and it will rotate and present a new pellet each time the loading bolt is cocked.

When all ten shots have been fired, the magazine will dislodge and not allow the shooter to push the loading bolt forward again until it has been removed for reloading or manually pushed back in.

WARNING: ALL SCREWS ON THIS MAGAZINE SYSTEM SHOULD BE 'PINCHED UP'. THE MAIN PARTS OF THIS PRODUCT ARE MADE OF PLASTIC AND ANY OVER TIGHTENING OF THE SCREWS WILL DAMAGE THE ITEM BEYOND FURTHER REPAIR. THIS KIND OF DAMAGE IS NOT COVERED BY THE WARRANTY.

Re Order List		
Part No.	Description.	Qty
S217C	Magazine .177 with 'O' Ring	1
S222C	Magazine .22 with 'O' Ring	1
S218	Magazine 'O' Ring .177	1
S219	Magazine 'O' Ring .22	1
S223	Clamp	1
RN106	Clamp Plate Screws	2
RN102A	Clamp screw	1
RN351	Clamp Nut	1


When ordering spares please use the part number and description shown above.

Air Arms, Unit 6, Hailsham Industrial Park, Diplocks, Hailsham, East Sussex, England BN27 3JF. Tel: 01323 845853. Fax: 01323 440573 Email: general@air-arms.co.uk



The Air Arms S200 10 Shot Magazine System



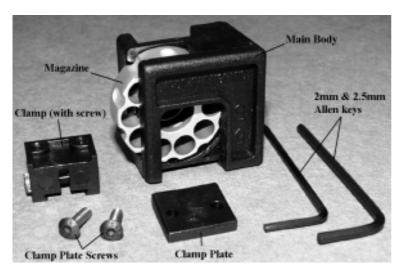

The S200 magazine system is an easy retrofittable mechanism designed to take the minimum amount of time and effort to turn your single shot S200 into a 10 shot auto loader. It comes fully assembled with the required tools to attach it to your Air Arms S200.

The kit contains: 2 Allen keys 1 x 2mm and 1 x 2.5mm, 1 x Main Body, 1 x Magazine, 1 x clamp (with screw and nut fitted), 1 x Clamp Plate and 2 x M3 Clamp Plate Screws.

The system is in two main parts. One part fits on the gun in place of the pellet trough and the other part is the magazine itself.




First remove the screws holding the pellet trough in place using the supplied 2.5mm Allen key **Fig.1.** Next, pull back the bolt and remove the trough from the gun **Fig. 2.** Once the trough is clear of the gun the main body of the magazine system can be fitted into the breech **Fig. 3.** make sure to seat it all the way home **Fig. 4.** Note: The aperture for the magazine should be on the right hand side of the gun with the Air Arms logo on the left.






Slide the clamp onto the dove tails of the rifle **Fig. 5.** and up to the main body, the clamp must be in position as shown in **Fig. 6.** with the holes next to the body. Now using the 2.5mm Allen key, pinch up the screw in the side of the clamp, the screw is fixing into a plastic moulding and does not have to be tight,

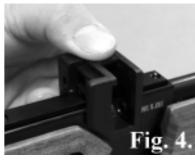





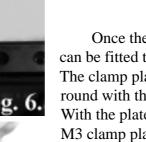





damage will occur if the screw is over tightened so care must be taken.

Once the clamp is in place the clamp plate can be fitted to hold the assembly in securely. The clamp plate has to be fitted the right way round with the pad to the rear of the gun **Fig. 7**. With the plate in place secure down with the 2 M3 clamp plate screws using the 2mm Allen key supplied, **again care must be taken because the screw is fixing into a plastic moulding and does not have to be tight. Fig. 8**.